
 




EAS00793

SIGNALING SYSTEM CIRCUIT DIAGRAM

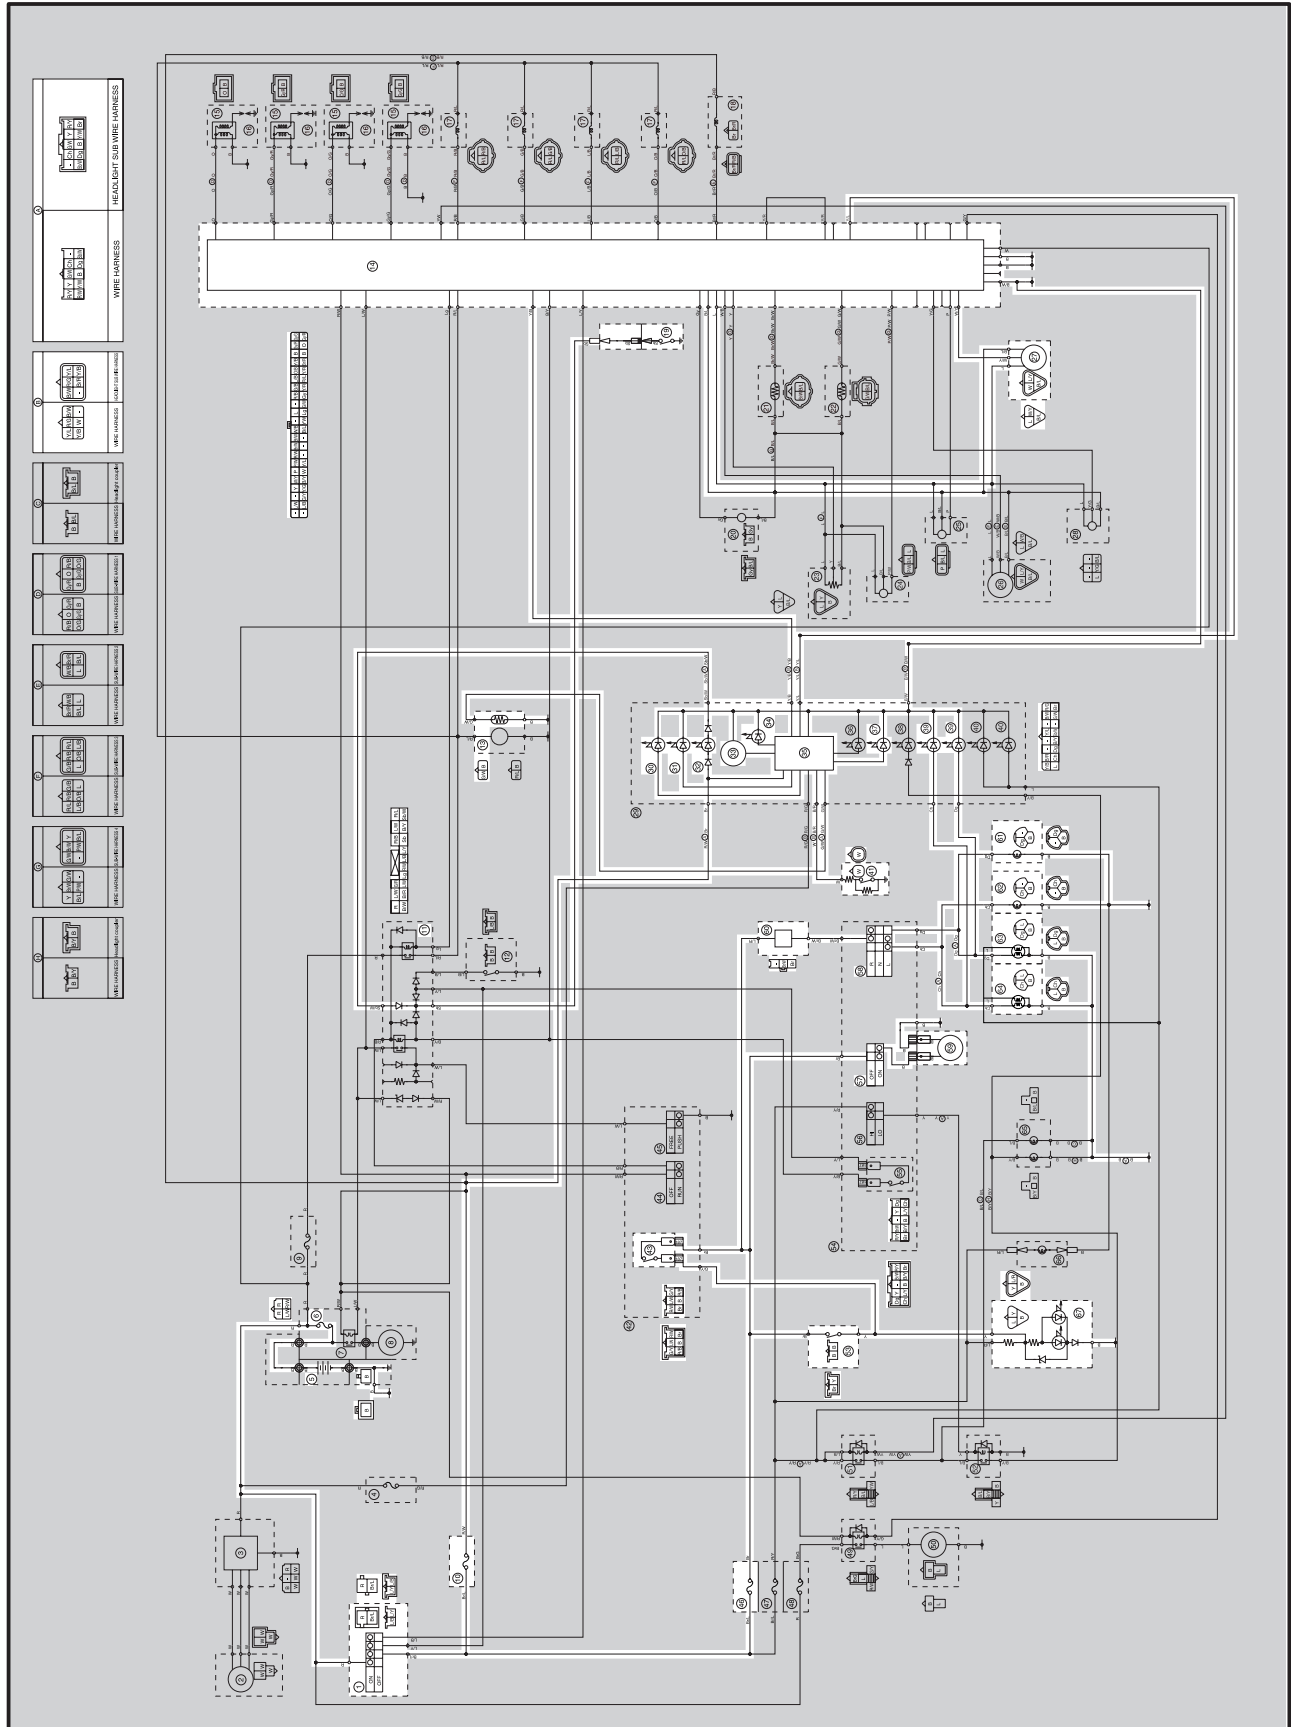



- ① Main switch
- ⑤ Battery
- ⑥ Fuse (main)
- ⑩ Fuse (ignition)
- ⑪ Starting circuit cut-off relay
- ⑬ Fuel pump
- ⑭ ECU
- ⑲ Neutral switch
- ⑳ Speed sensor
- ③① Fuel level warning light
- ③① Oil level warning light
- ③② Neutral indicator light
- ③③ Tachometer
- ③④ Shift timing indicator light
- ③⑤ Multi-function meter
- ③⑦ Coolant temperature indicator light
- ③⑨ Turn signal indicator light
- ④① Oil level switch
- ④③ Front brake light switch
- ④⑥ Fuse (signal)
- ⑤③ Rear brake light switch
- ⑤⑦ Horn switch
- ⑤⑧ Turn signal switch
- ⑤⑨ Horn
- ⑥① Turn signal relay
- ⑥① Rear turn signal light (right)
- ⑥② Rear turn signal light (left)
- ⑥③ Front turn signal/position light (right)
- ⑥④ Front turn signal/position light (left)
- ⑥⑦ Tail/brake light